

Activation and registration of DataDump application

Content:

[Serial number](#)

[Hardware code](#)

[Registration](#)

[Activation](#)

Serial number

You previously received your serial number by e-mail:

Dear.

A serial number has been generated:

Company: My Company

Customer: John Mouser

Serial number: 123456789

License Type: Update


Support: 6 months setup support (free)

Due date: January 13, 2011

Goto www.sdt.be/license/OpenOffice/Activation.php to apply for your license number.

Standard e-mail of serial number attribution

During the first launching of the DataDump application, the following license window opens automatically:

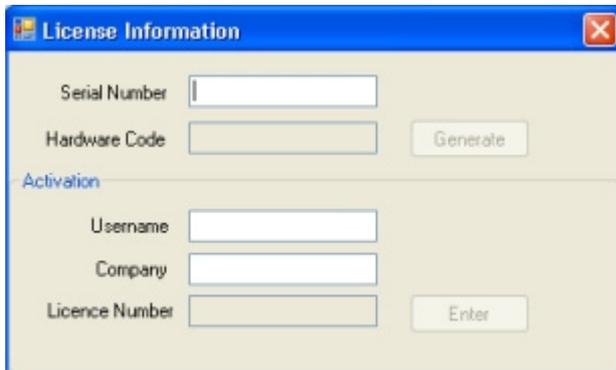


The screenshot shows a window titled "License Information" with a blue header and a red close button. The window contains several input fields and buttons. At the top, there is a "Serial Number" field with a cursor. Below it is a "Hardware Code" field and a "Generate" button. A section titled "Activation" is separated by a horizontal line. It contains a "Username" field, a "Company" field, and a "Licence Number" field. There is an "Enter" button next to the "Licence Number" field.

Encode your serial number in the corresponding field.

Hardware code

Generate your hardware code by clicking on the button "**Generate**":

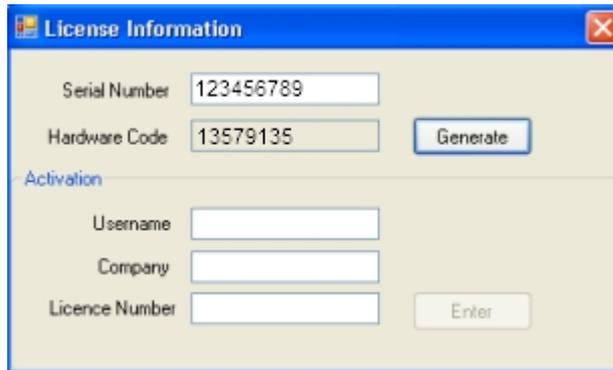


The screenshot shows a window titled "License Information". It contains a "Serial Number" field with the value "123456789" and a "Hardware Code" field with the value "13579135". A "Generate" button is located to the right of the Hardware Code field. Below this, under the "Activation" section, there are three input fields: "Username", "Company", and "Licence Number". An "Enter" button is positioned to the right of the "Licence Number" field.

The hardware code has been generated

Registration of DataDump

Visit our server at the address www.sdt.be/license/OpenOffice/Activation.php.

Encode your serial number in the corresponding field and then click "**Request**":

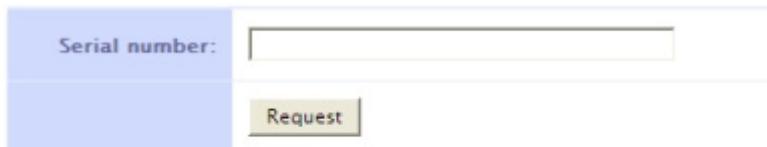

The screenshot shows a simple form with a label "Serial number:" followed by an empty text input field. Below the input field is a button labeled "Request".

[Retry](#)

Type your serial number

The server asks you to confirm your coordinates:



The screenshot shows a confirmation form. On the right side, it says "This serial number is licensed to:" followed by the following details: "Company: My Company", "Name: John Mouser", "Address:", "Address:", "State: None", and "Country: Belgium". Below this information is a checked checkbox next to the text "I have validated my information:". Underneath the checkbox is a label "PC Hardware code:" followed by an empty text input field. At the bottom right of the form is a button labeled "Validate".

[Retry](#)

If information is correct, tick the box "**I have validated my information:**", type your hardware code in the corresponding field and click "**Validate**". The system send you by e-mail your license number.

If information is incorrect, please contact your local dealer or SDT International.

Dear .


Company: My Company
Customer: John Mouser

Serial number: 123456789
Update license: 024680246

Standard e-mail of license number attribution

Activation of DataDump

Come back to the license window of DataDump, type your license number in the regarding field and click "**Enter**". You can also add your user and company names:

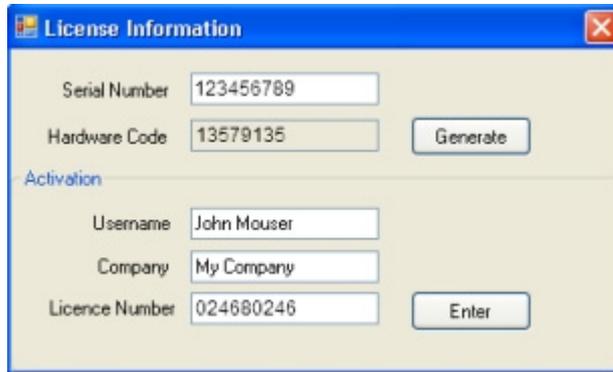

The screenshot shows a window titled "License Information" with a close button in the top right corner. The window contains the following fields and buttons:

- Serial Number: 123456789
- Hardware Code: 13579135
- Generate button
- Activation section:
- Username: John Mouser
- Company: My Company
- Licence Number: 024680246
- Enter button

Type the license number, your user and company names

The application confirms your activation is successfully completed:



You can now update or upgrade your SDT270 device using DataDump.