

# PostgreSQL 18 upgrade

This guide explains how to upgrade PostgreSQL to version 18 using Ultranalysis Suite (UAS) Software.

## Notes

---

- Do not interrupt the process during installation or data migration.
- Ensure your system remains powered on throughout the upgrade.
- The duration may vary depending on the size of your database.

## Step 1 – Launch UAS3/UASLite


---

Start Ultranalysis Suite Software

## Step 2 – Open the Update Window

---


Click on the text: "Click here to open the update window"

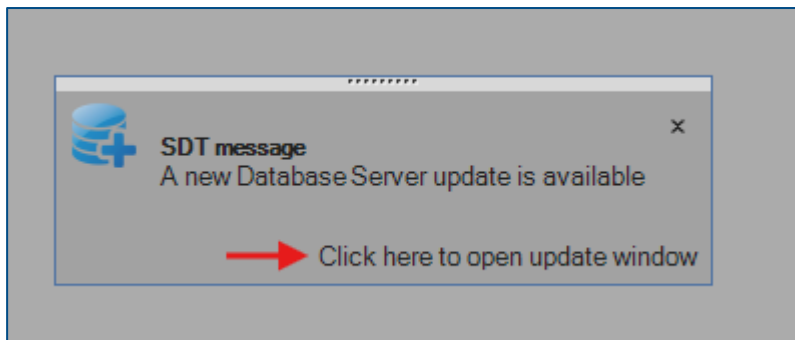

## Step 3 – Download the Update


---

Click Download

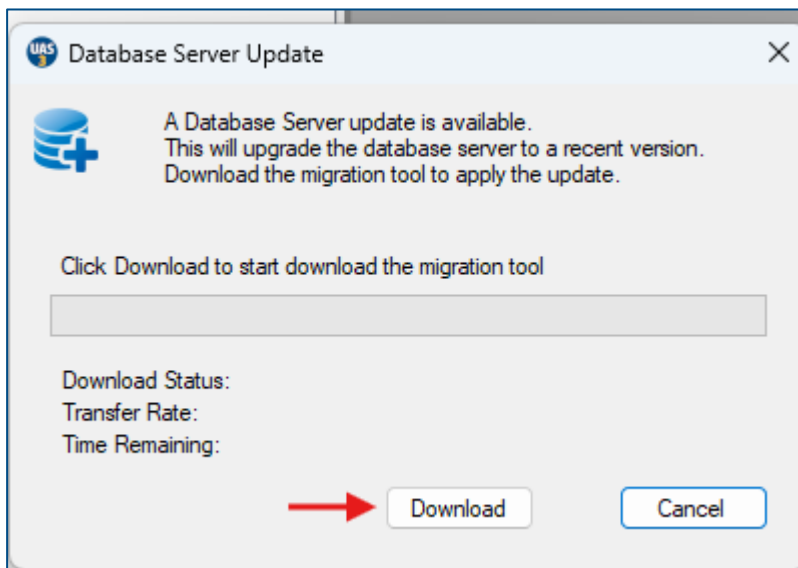

## Step 4 – Confirm the Download


When prompted, click Yes to confirm.

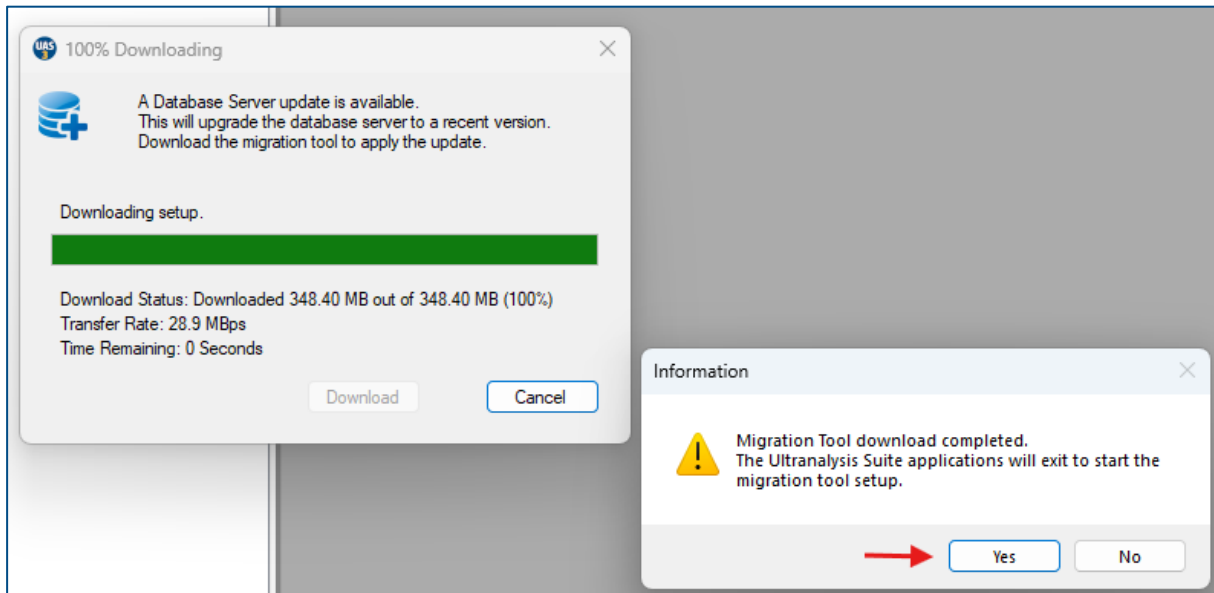

## Step 5 – Install the Update

UAS will automatically close.

You will then see the installation screen:

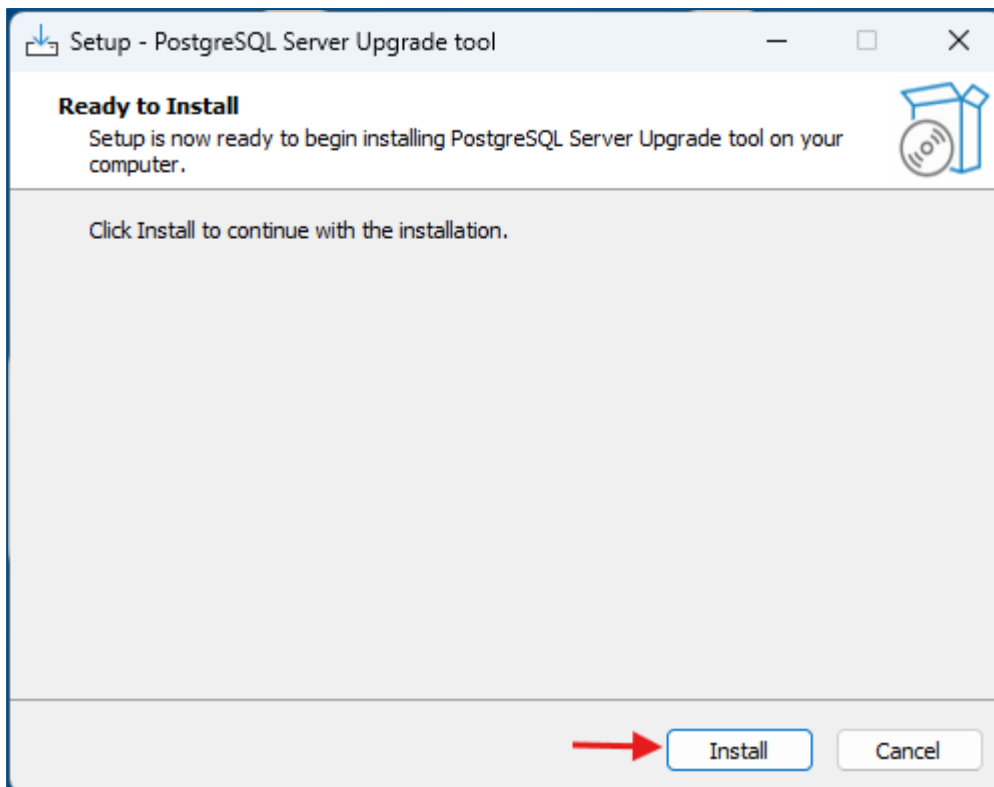


Click Install and wait for the next screen.

## Step 6 – Start the Upgrade Process


Click Start.

The system will:


- Install PostgreSQL 18
- Migrate your existing data

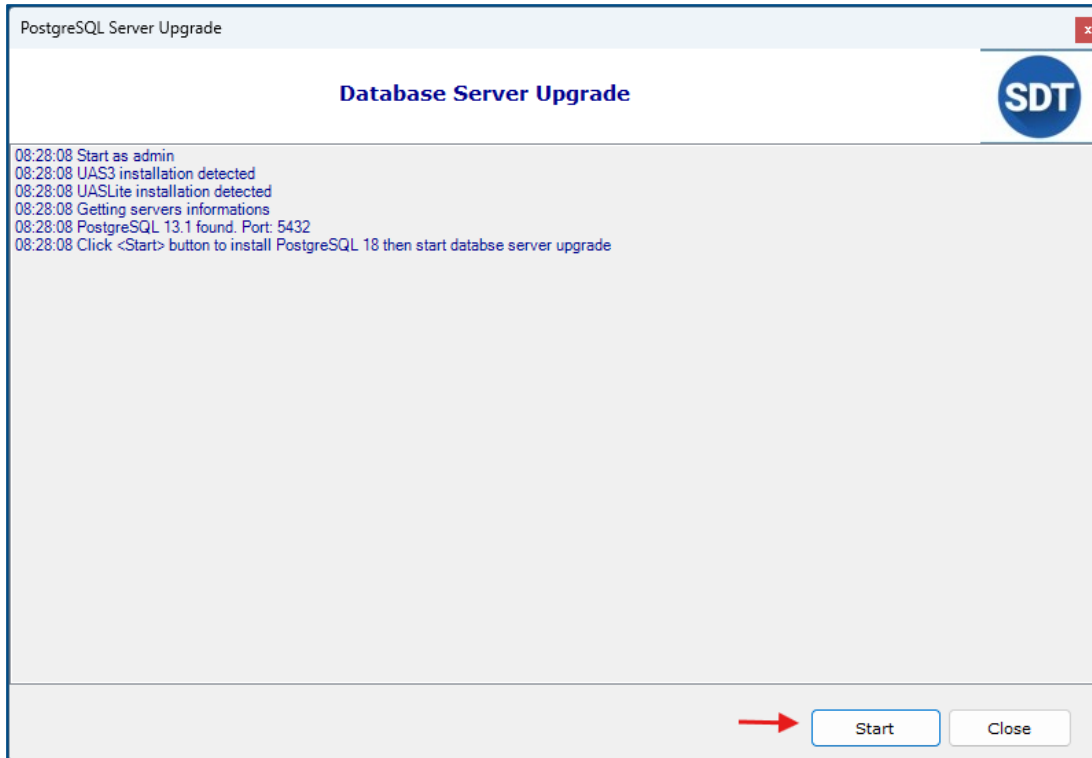

- Install PostgreSQL 18

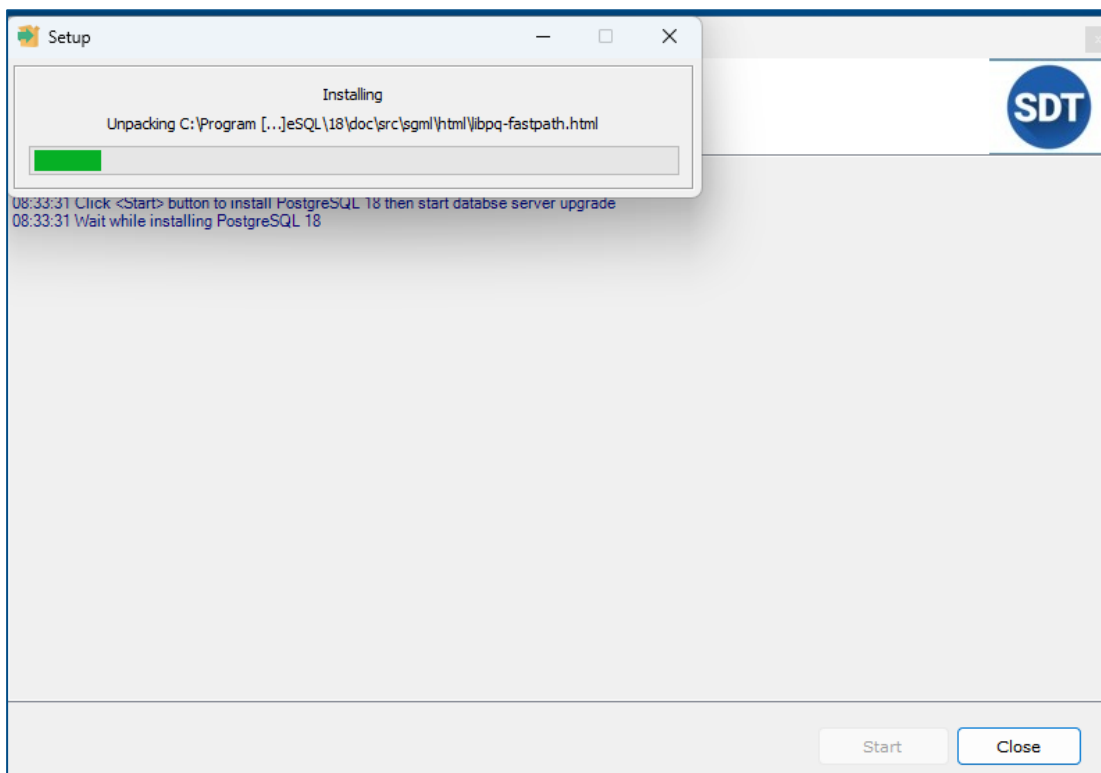


- Migrate your existing data

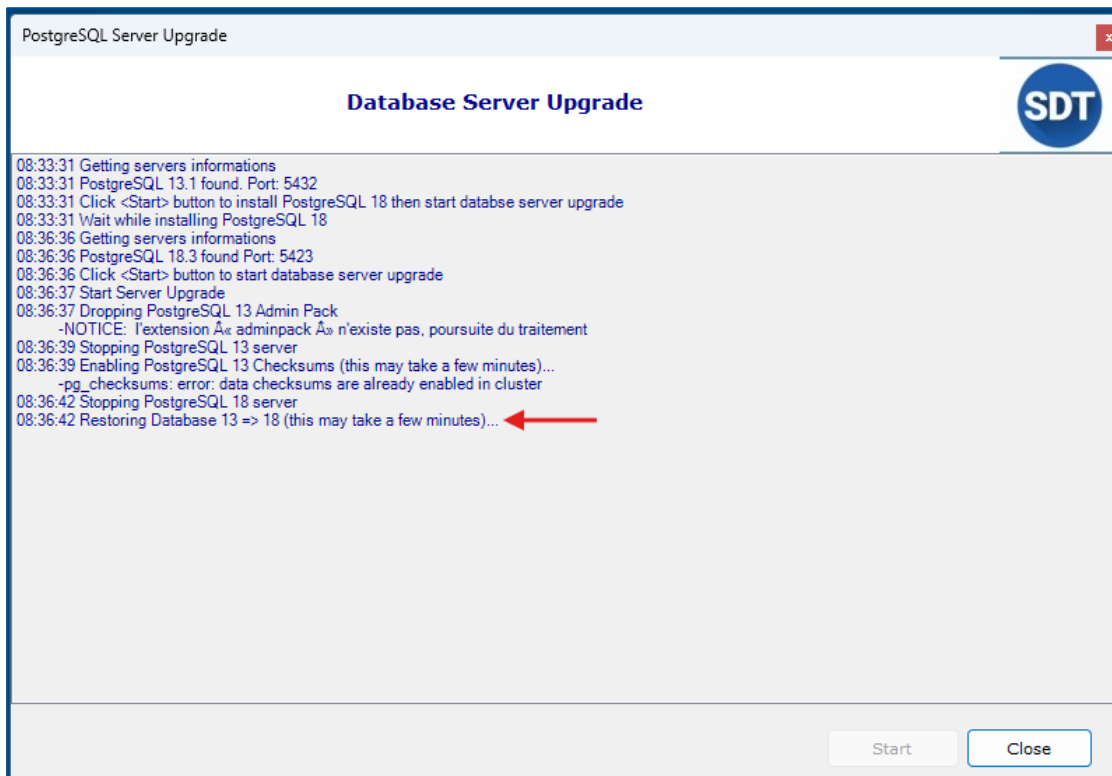

## Step 7 – Finish the Installation

Once the process is complete, click Close.

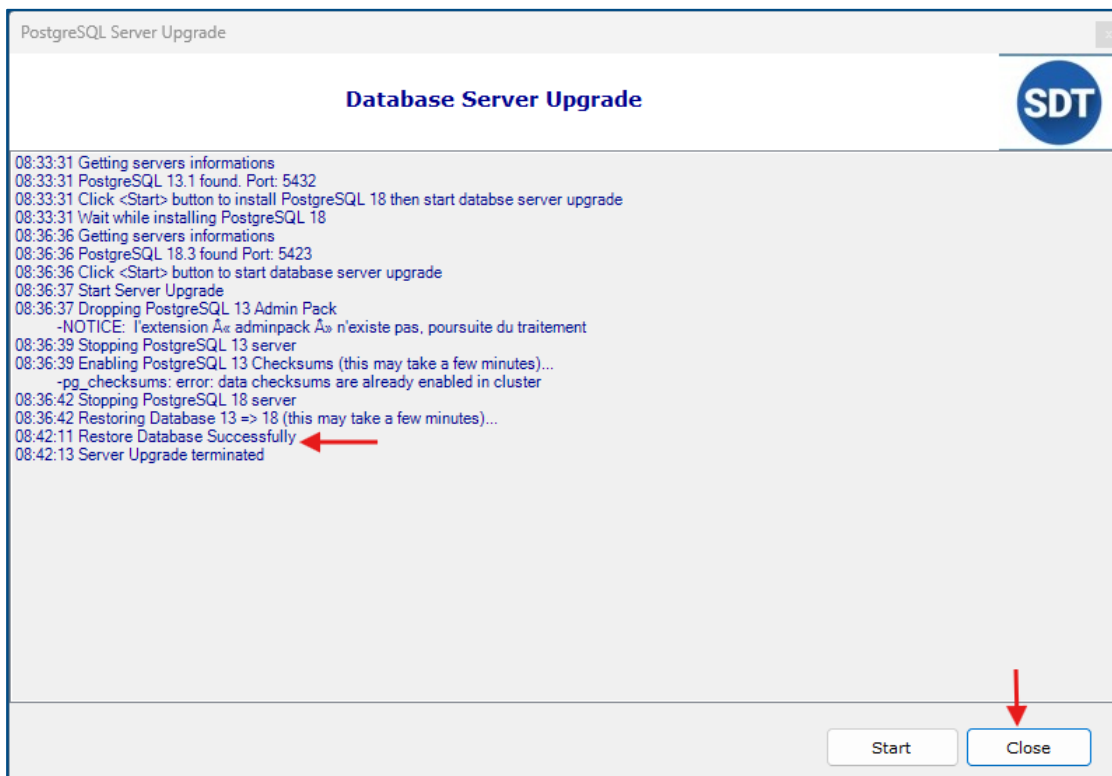

## **Step 8 – Restart UAS3/UASLite**

---

Restart UAS3/UASLite to complete the upgrade.