

# Activación y registro de software de SDT270 (DataDump, Ultranalysis y Updater)

Ya ha recibido el número de serie por correo electrónico:


Dear John DOE,

The following license has been assigned to you.

Type	Serial No	License No	Assigned to
UAS Dynamic	123456789	not yet activated	My Company, John DOE

**Quick guide**

1. Install the software on the destination computer.
2. Generate your computer's hardware code:
  - Start the software.
  - The license info form will be automatically opened :

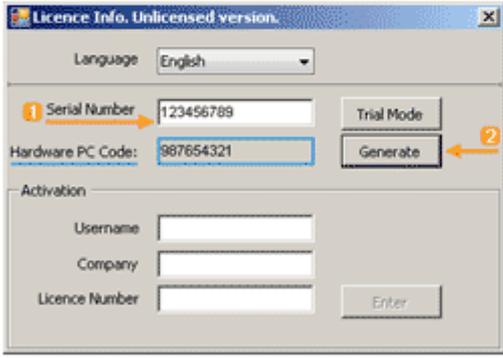

- There, enter the serial number of your license.
- ...and click the "Generate" button.

3. Then go to the [license activation page](#) and follow the instructions.

SDT International - [www.sdt.be](http://www.sdt.be)

Mensaje estándar con el número de serie

Haga clic en el vínculo de la licencia por e-mail a visitar a nuestro servicio de activación de la licencia ([extranet.sdt.eu/licenses/activate](http://extranet.sdt.eu/licenses/activate)).

Allí, siga las instrucciones para obtener su número de licencia y activar su licencia.